


CASAMBI

4CC LED CONTROLLER



USER MANUAL

Casambi 4CC LED Controller - Constant Current LED Driver

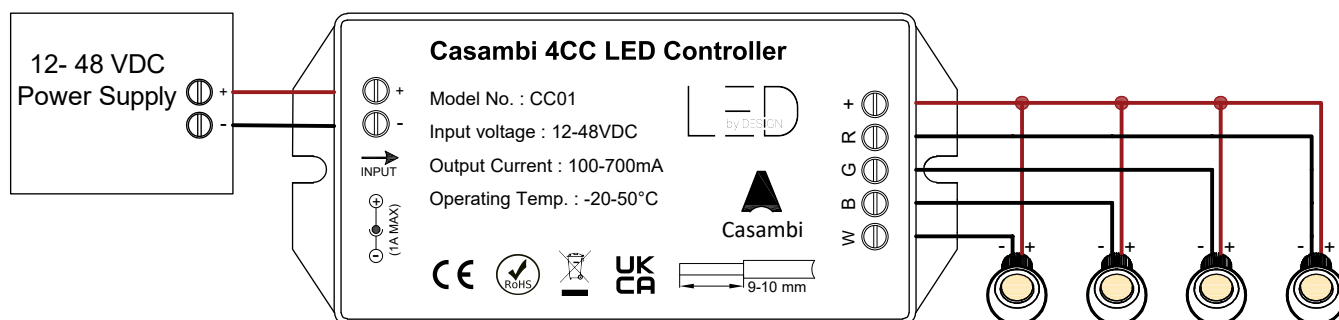


NOTES:


- 1) Before setting up the device on the app, connect the LEDs and the power supply to the device. Then, turn on the power.
- 2) Select a profile (4CH, 3CH, 2CH, 1CH, 4CH RGB/W, 3CH RGB, 2CH TW, 2xTW) before adding the device to the network ([see fig. 1](#)).
- 3) After adding the device to the network, Select the Current set ([see fig. 2](#)).

BASIC STEPS TO SET UP CASAMBI 4CC LED CONTROLLER:

1. Download the CASAMBI APP

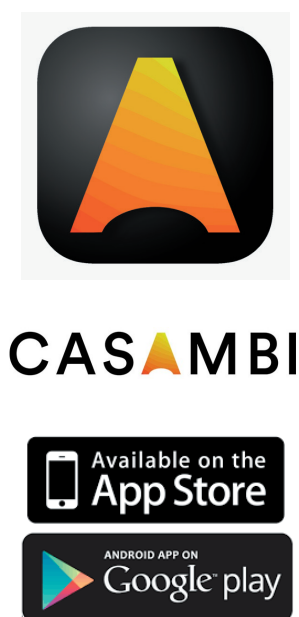


2. Create a New Network

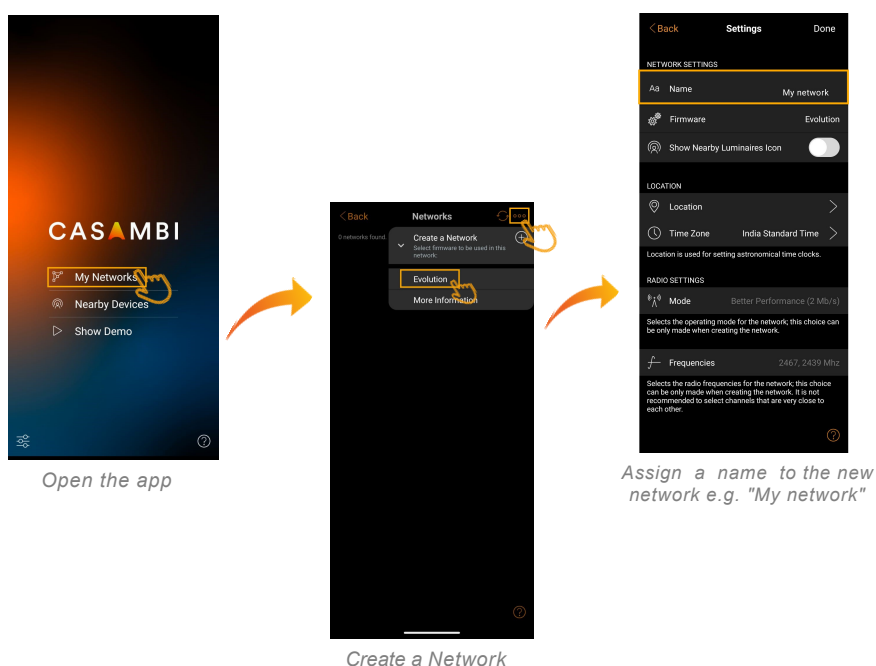


BASIC STEPS TO SET UP CASAMBI 4CC LED CONTROLLER:

3. Add the 4CC LED Controller to the network

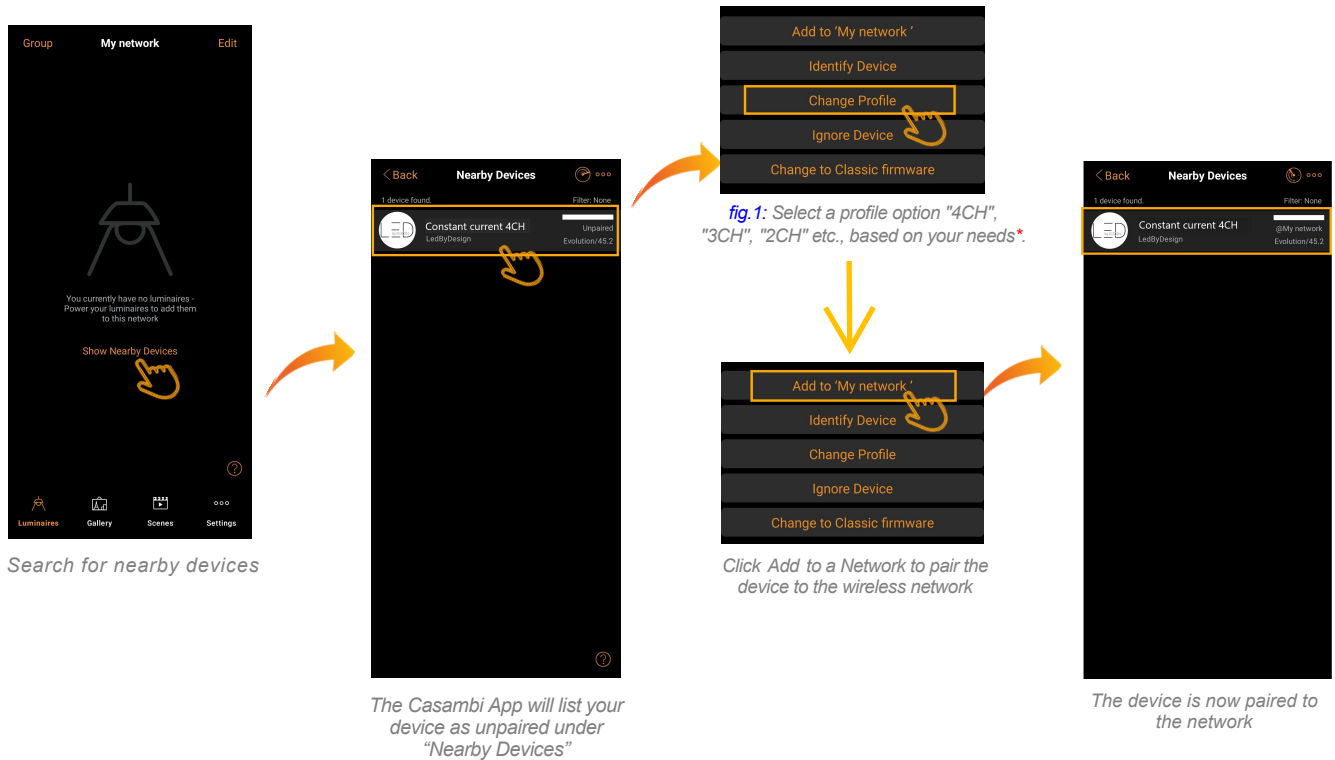


4. Control the paired Device

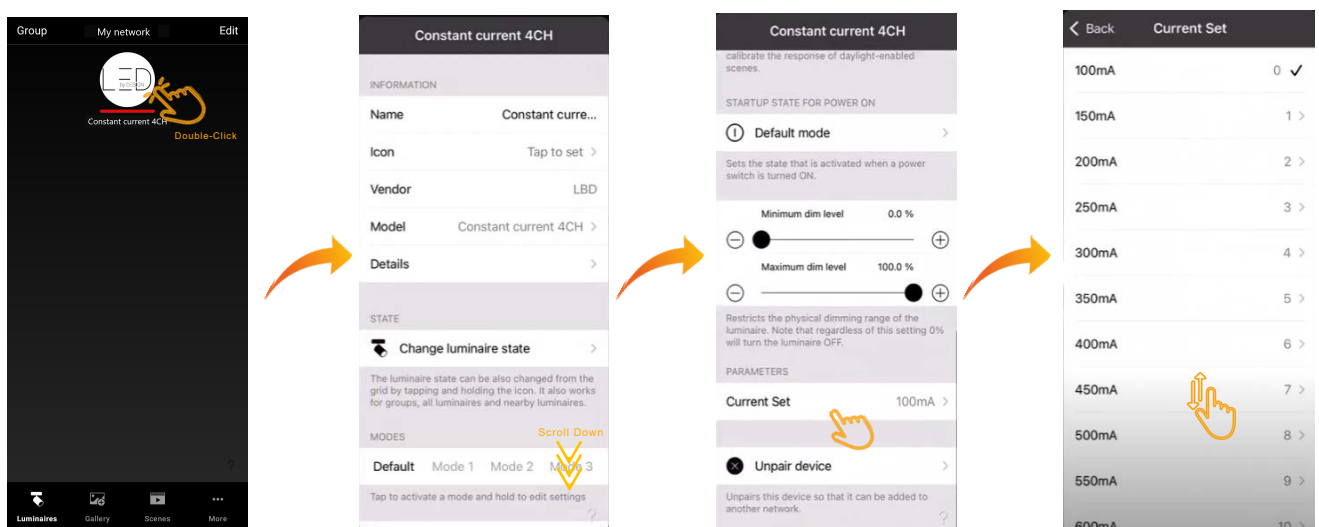

After pairing, the app will display the device as shown, simply double-click the device icon to change the Name and scroll fully down to select the current set**.

BASIC STEPS TO SET UP CASAMBI 4CC LED CONTROLLER:

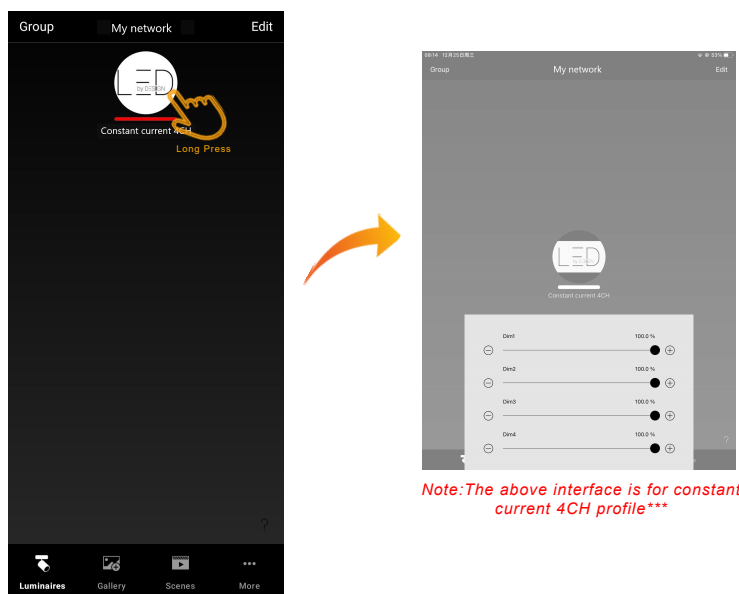

*Note: The above interface is for constant current 4CH profile****

Long press the device icon to access settings for dimming and changing colours.

ADDITIONAL NOTES:

- 1) The default profile is RGBW*.
- 2) The default current is 100mA. When unit is unpaired, preset current will be saved, even if in parameters section it will show up as default value instead**.
- 3) The interface will vary based on the selected profile***.
- 4) Custom firmware is available upon request.
- 5) Colour picker is used for colour selection.
- 6) 10 Small boxes at the bottom are also scene selectors; select a colour that you like and then press and hold on a box, the colour is stored and appears in the box.


CASAMBI

4CC LED-controller



BRUGERMANUAL

Casambi 4CC LED-controller - LED-driver med konstant strøm

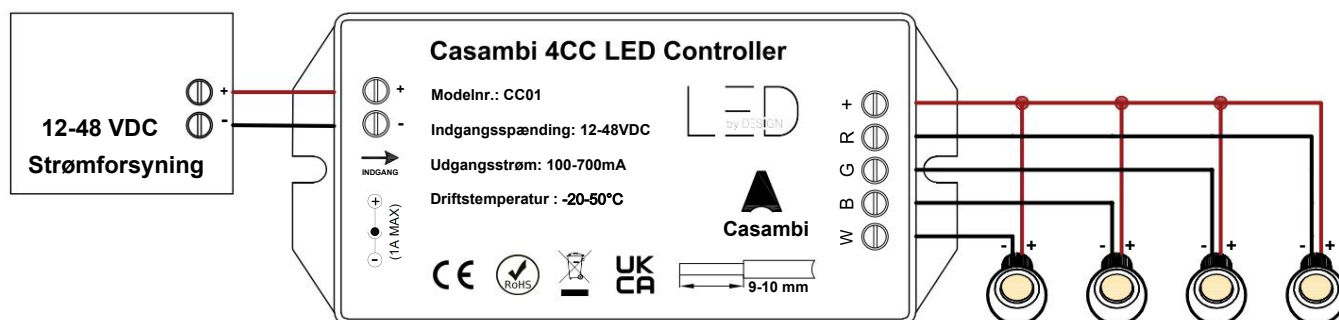


NOTER:

- 1) Før du konfigurerer enheden i appen, skal du tilslutte LED produkterne og strømforsyningen til enheden. Tænd derefter for strømmen.
- 2) Vælg en profil (4CH, 3CH, 2CH, 1CH, 4CH RGB/W, 3CH RGB, 2CH TW, 2xTW), før du tilføjer enheden til netværket ([se fig. 1](#)).
- 3) Når du har tilføjet enheden til netværket, skal du derefter vælge den ønskede indstilling "set" ([se fig. 2](#)).

GRUNDLÆGGENDE TRIN TIL OPSÆTNING AF CASAMBI 4CC LED-CONTROLLER:

1. Download CASAMBI-appen

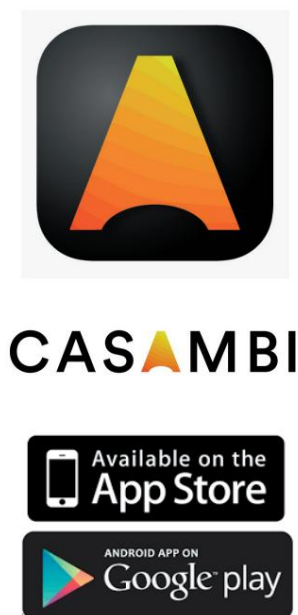


2. Opret et nyt netværk



Åbn appen




Opret et netværk

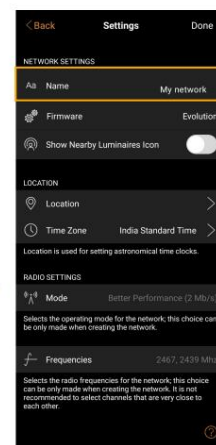


Giv det nye netværk et navn, f.eks. "Mit netværk".

GRUNDLÆGGENDE TRIN TIL OPSÆTNING AF CASAMBI 4CC LED-CONTROLLER:


3. Tilføj 4CC LED-controlleren til netværket

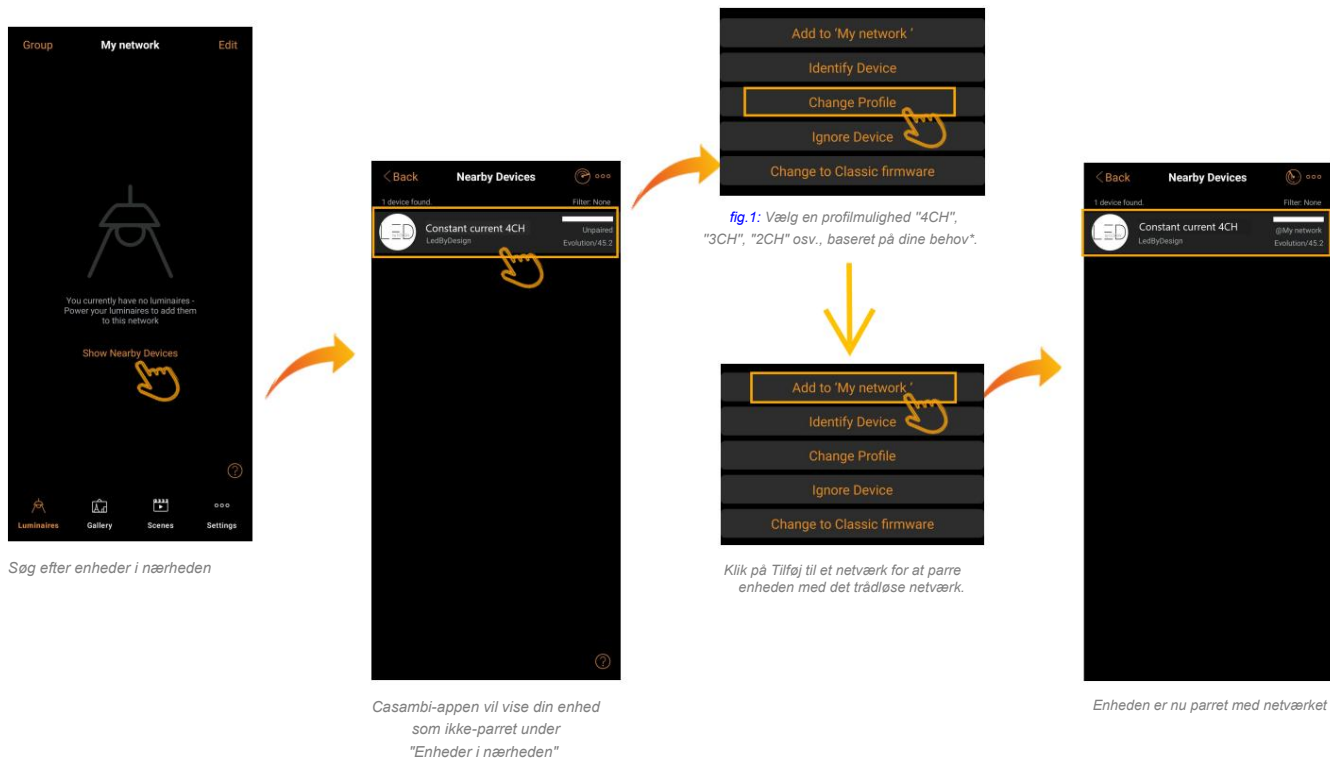

4. Styr den parrede enhed

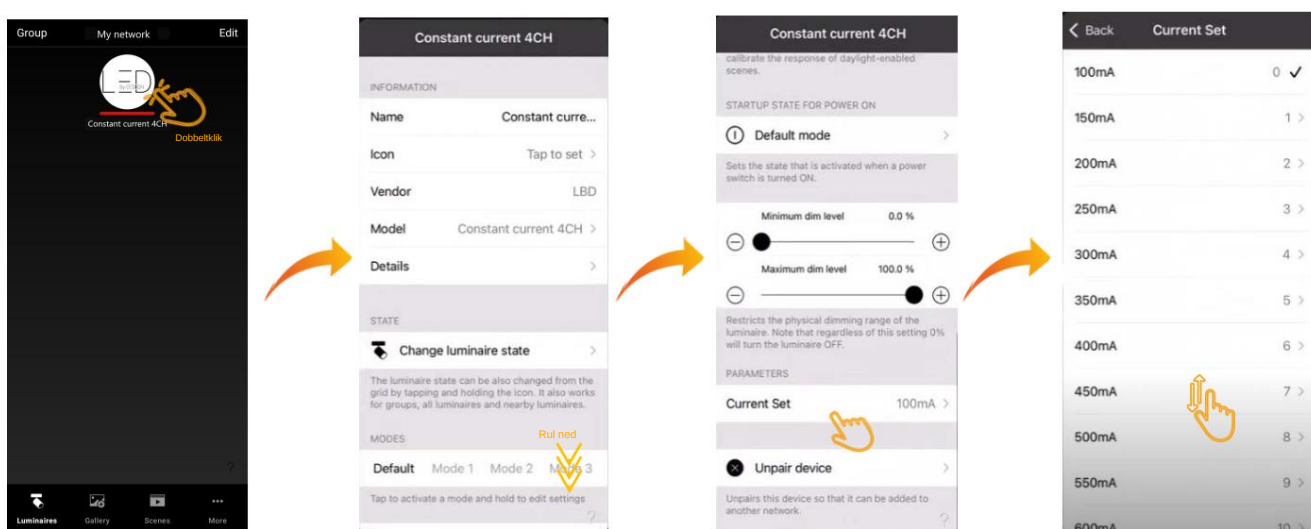

GRUNDLÆGGENDE TRIN TIL OPSÆTNING AF CASAMBI 4CC LED-CONTROLLER:

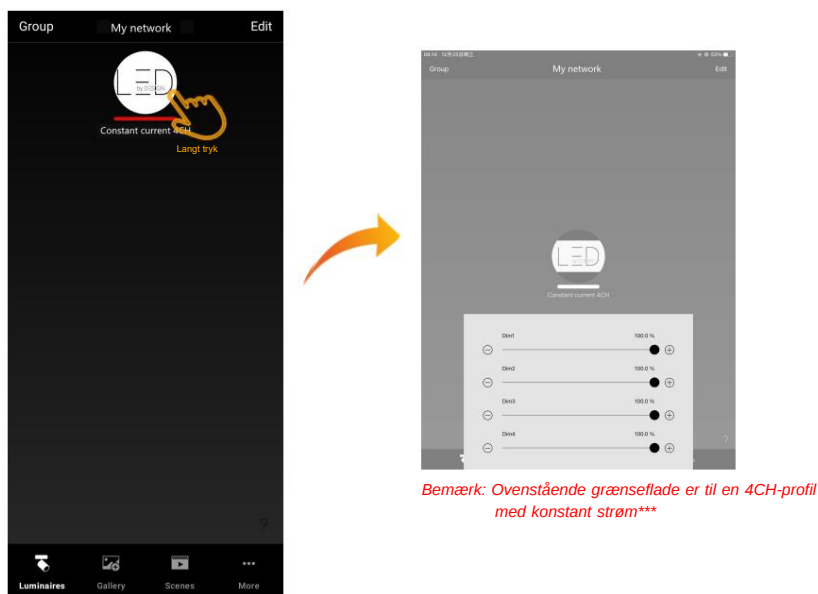

Bemærk: Ovenstående grænseflade er til en 4CH-profil med konstant strøm***

Tryk længe på enhedsikonet for at få adgang til indstillinger for dæmpning og ændring af farver.

YDERLIGERE NOTER:

1. Standardprofilen er RGBW*.
2. Standardstrømmen er 100 mA. Når enheden ikke er parret, gemmes den forudindstillede strøm, selvom den er i parameterafsnittet. Den vil i stedet vises som standardværdi**.
3. Grænsefladen vil variere afhængigt af den valgte profil***.
4. Brugerdefineret firmware er tilgængelig efter anmodning.
5. Farvevælgeren bruges til farvevalg.
6. 10 små bokse nederst er også scenevælgere; vælg en farve, du kan lide, og tryk derefter på en boks og hold den nede. Farven gemmes og vises i boksen.